



Basic Configuration

1. Open VTX tab, click "Load from File", select the corresponding VTX table, import it, and save.

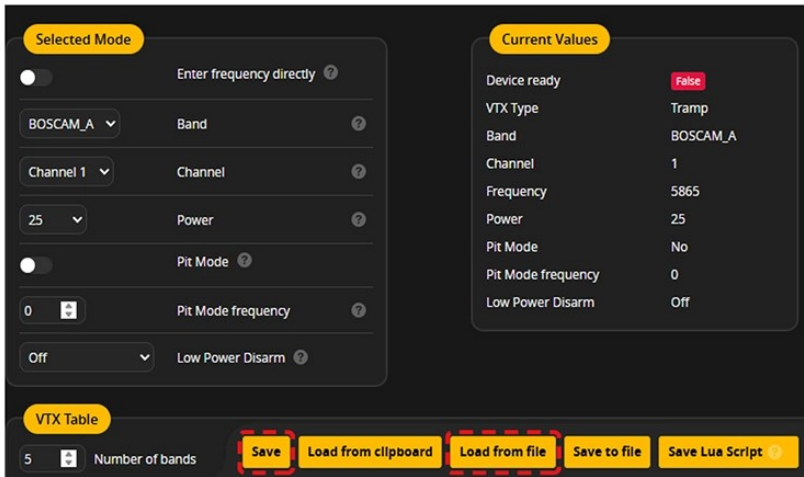

2. Open the Ports tab, enable "Peripherals" → "VTX (IRC TRAMP)" on the corresponding UART port.

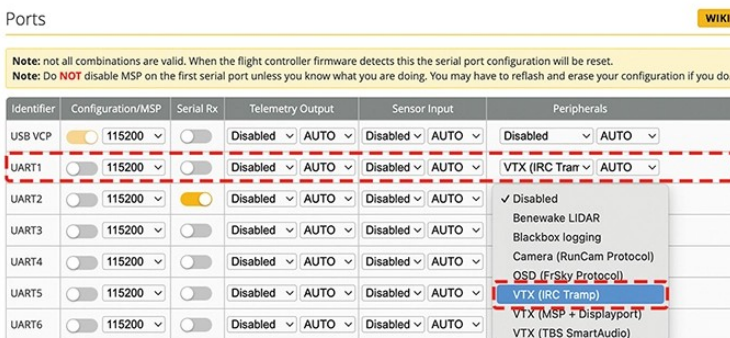

3. Open the VTX tab and configure as follows.

