


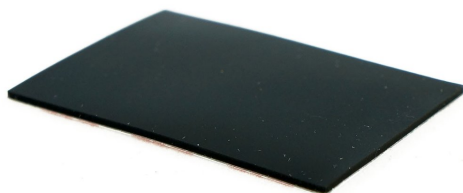

Silicone battery pad

Smooth · pack of 10 · 50 × 35 × 1.2 mm
User manual



Read this manual before use and keep it for future reference.

Rotorama, s.r.o. · www.rotorama.cz

Contents

1. Product description

1.1 What it is for

1.2 Specifications and package contents

2. Use

2.1 What you will need

2.2 Attaching the pad step by step

2.3 Use on a drone frame

2.4 Safety and care

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

3.2 Disposal


4. Warranty and rights arising from defective performance

1. Product description

1.1 What it is for

The silicone pad increases friction between the battery and the carbon frame of the drone. The battery is less likely to slide on it, which reduces the chance of it slipping or falling out of the frame in a crash.

The pad has a smooth top surface and a 3M self-adhesive layer on the underside, protected by a liner. It is stuck onto the area of the frame on which the battery rests. The pack contains 10 pads, enough for several drones and for replacing a worn pad later.

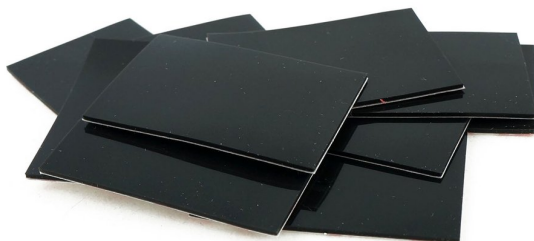

Silicone battery pads – smooth

1.2 Specifications and package contents

Product designation	Silicone battery pad 10 pcs – smooth
Material	silicone
Dimensions of one pad	50 × 35 × 1.2 mm
Top side	smooth
Underside	3M self-adhesive layer with protective liner
Package contents	10× silicone pad
Not included	battery, frame, battery strap

2. Use

2.1 What you will need

- a silicone pad from the pack,
- a clean cloth and a degreasing agent (e.g. isopropyl alcohol),
- scissors – only if you want to trim the pad to a smaller size.

2.2 Attaching the pad step by step

- ① Disconnect the battery and remove it from the frame.
- ② Clean the area of the frame where the pad will go, removing dust and dirt, and degrease it. Let it dry completely.
- ③ Test-fit the pad and check that it does not cover the battery strap slots or other parts. Trim it if necessary.
- ④ Peel the protective liner off the underside. Do not touch the adhesive layer with your fingers.
- ⑤ Place the pad on the prepared area and press it firmly over its entire surface, especially at the edges.
- ⑥ Allow the adhesive to bond sufficiently before the first flight.
- ⑦ Place the battery on the pad and secure it with the battery strap as usual.



Underside of the pad with the 3M self-adhesive layer and protective liner

2.3 Use on a drone frame

- The pad only keeps the battery from sliding. **It does not replace the battery strap** – the battery must always be firmly secured with the strap.
- The battery strap can run over or under the pad; just make sure the pad does not cover the slots the strap passes through.
- After a crash, check that the pad is still attached to the frame over its entire surface and is not torn.
- Replace a worn, damaged or detached pad with a new one. Remove any adhesive residue from the frame before attaching the new pad.

2.4 Safety and care

- The product is intended for persons aged 14 and over.
- Keep the smooth surface clean – dust and grease reduce friction. Wipe it with a damp cloth.
- Store unused pads with the protective liner in place, in a dry location away from direct sunlight.
- Follow the applicable regulations when flying a drone. The law of the country in which the product is operated is decisive.

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

The product is placed on the European Union market by the importer stated below, who is at the same time the responsible person within the meaning of Article 16 of Regulation (EU) 2023/988 of the European Parliament and of the Council on general product safety (GPSR).

Importer / responsible person in the EU	Rotorama, s.r.o.
Company ID (IČO)	051 57 692
VAT ID (DIČ)	CZ05157692
Registered office	Okrajová 1351, 674 01 Třebíč, Czech Republic
E-mail	info@rotorاما.cz
Phone	+420 252 252 098
Website	www.rotorاما.cz

3.2 Disposal

The product contains no electronics or batteries and is not subject to the take-back of electrical equipment. Dispose of used pads and removed liners with mixed municipal waste unless your local rules specify otherwise. Sort the packaging according to its material.

4. Warranty and rights arising from defective performance

The rights and obligations of the contracting parties are governed by Czech law, in particular by Act No. 89/2012 Coll., the Civil Code, and Act No. 634/1992 Coll., on consumer protection.

- The seller is liable to the buyer for the product being free of defects on receipt. If the buyer is a consumer, a defect may be notified **within two years of receipt** of the product (Section 2165 of the Civil Code).
- If a defect appears within **one year** of receipt, the product is deemed to have been defective already at the time of receipt (Section 2161(5) of the Civil Code).
- When purchasing online, a consumer has the right to **withdraw from the contract within 14 days** of receiving the goods without giving a reason (Section 1829 of the Civil Code).
- Claims should be made with the retailer from whom you purchased the product. The importer's contact details are given in Chapter 3.1.
- The competent body for out-of-court settlement of consumer disputes is the **Czech Trade Inspection Authority**, Štěpánská 796/44, 110 00 Prague 1, www.coi.cz.