
Quad Strap

Torvol – strap for carrying a quad on a backpack
User Manual

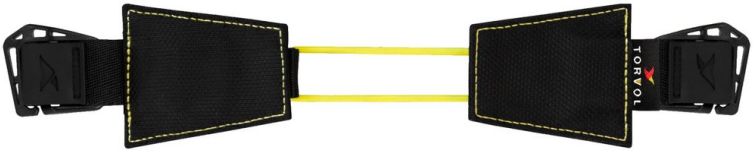

Read this manual before use. The strap is designed for the Torvol Quad PITSTOP Backpack.

Rotorama, s.r.o. · www.rotorama.com

Contents

1. Product description

1.1 What it is for

1.2 Specifications and package contents

2. Use

2.1 Attaching the strap to the backpack

2.2 Securing the quad

2.3 Removing the quad and the strap

2.4 Safety and care

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

3.2 Disposal

4. Warranty and rights arising from defective performance

1. Product description

1.1 What it is for

The **Torvol Quad Strap** is an add-on strap for the **Torvol Quad PITSTOP Backpack**. It lets you attach one additional quad to the outside of the backpack, so you can fill the backpack with gear and still carry an extra quad – without having to buy a bigger backpack.

The strap consists of two fabric panels connected by elastic bands whose tension can be adjusted. At the ends of the panels there are quick-release latches that make the strap easy to attach to the backpack and just as easy to remove – depending on how many quads you are taking with you.



Quad Strap attached to the Quad PITSTOP Backpack with a quad

1.2 Specifications and package contents

Manufacturer's code	TO019
Manufacturer	Torvol (www.torvol.com)
Designed for	Torvol Quad PITSTOP Backpack
Versions	several colours; manual applies to all
Weight	60 g
Dimensions	approx. 30 × 6 × 3 cm
Package contents	1× Quad Strap
Not included	Quad PITSTOP Backpack, quad


2. Use

2.1 Attaching the strap to the backpack

① Lay out the strap so that the panels face the sides of the backpack and the elastic bands run across the front of the backpack.

② Attach the quick-release latch at the end of each panel to the mounting point on the side of the backpack and snap it shut.

③ Check that both latches hold firmly and the strap sits symmetrically on the backpack.

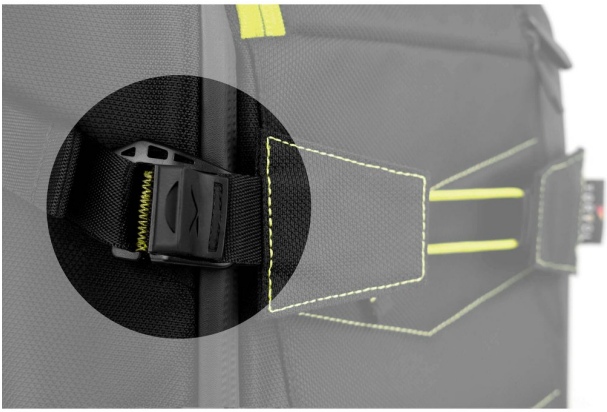

Quick-release latch of the strap on the side of the backpack



Strap attached to the backpack, ready for a quad

2.2 Securing the quad

① Place the quad on the front of the backpack between the two panels.

② Pull the elastic bands over the quad's frame, ideally over its centre, so that they do not press on the propellers or the antenna.

③ Adjust the band tension so that the quad is held firmly and does not shift while you walk.

④ Before you set off, try to move the quad – it must not tilt freely or fall out.

2.3 Removing the quad and the strap

Loosen the elastic bands and take the quad out. When you do not need the strap, release the quick-release latches and remove the strap from the backpack.

2.4 Safety and care

- Always carry the quad **with the battery disconnected**. Do not transport LiPo batteries connected to the quad.
- Watch out for the sharp edges of the propellers – when putting on the backpack or in a crowd they can injure you or people around you. We recommend removing the propellers or turning them so that they do not stick out.
- Do not use the strap for any purpose other than the one it is intended for, and do not overload it.
- Before each use check that the elastic bands are not torn and the latches are not cracked. Do not use a damaged strap.
- Wipe a dirty strap with a damp cloth and let it dry naturally. Store it in a dry place, out of direct sunlight.

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

The product is placed on the European Union market by the importer stated below, who is at the same time the responsible person within the meaning of Article 16 of Regulation (EU) 2023/988 of the European Parliament and of the Council on general product safety (GPSR).

Importer / responsible person in the EU	Rotorama, s.r.o.
Company ID (IČO)	051 57 692
VAT ID (DIČ)	CZ05157692
Registered office	Okrajová 1351, 674 01 Třebíč, Czech Republic
E-mail	info@rotorama.cz
Phone	+420 252 252 098
Website	www.rotorama.com

3.2 Disposal

- The product **is not electrical or electronic equipment** and contains no batteries. The take-back scheme for electrical equipment does not apply to it.
- At the end of its service life, dispose of it according to the waste sorting rules applicable where you use the product (textile and plastic parts, or mixed municipal waste).
- Sort the packaging by material (paper, plastic).

4. Warranty and rights arising from defective performance

The rights and obligations of the contracting parties are governed by Czech law, in particular by Act No. 89/2012 Coll., the Civil Code, and Act No. 634/1992 Coll., on consumer protection.

- The seller is liable to the buyer for the product being free of defects on receipt. If the buyer is a consumer, a defect may be notified **within two years of receipt** of the product (Section 2165 of the Civil Code).
- If a defect appears within **one year** of receipt, the product is deemed to have been defective already at the time of receipt (Section 2161(5) of the Civil Code).
- When purchasing online, a consumer has the right to **withdraw from the contract within 14 days** of receiving the goods without giving a reason (Section 1829 of the Civil Code).
- Claims should be made with the retailer from whom you purchased the product. The importer's contact details are given in Chapter 3.1.
- The competent body for out-of-court settlement of consumer disputes is the **Czech Trade Inspection Authority**, Štěpánská 796/44, 110 00 Prague 1, www.coi.cz.