DJI Goggles N3

FPV Goggles
User Manual



Before first use, read this entire manual carefully, especially the safety instructions, and keep it for future reference. This product may be used only by persons aged 14 and over.

www.rotorama.com

Contents

Before You Start

1. Overview

2. Preparing the Goggles

2.1 Powering on the Goggles

2.2 Wearing the Goggles

3. Activation

4. Linking

4.1 Linking via DJI Fly App (recommended)

4.2 Linking via Button

5. Using the Goggles

5.1 FPV View

5.2 Goggles Buttons

5.3 AR Cursor

5.4 Goggles Footage Storage and Export

5.5 Liveview Sharing

5.6 Panorama Video Playback

5.7 Head Tracking

6. Maintenance

6.1 Replacing the Foam Padding

6.2 Cleaning and Maintenance

6.3 Built-in Battery

7. Appendix

7.1 Specifications

7.2 Updating Firmware

7.3 Compatibility

7.4 Risk and Warnings
7.5 Troubleshooting
7.6 Direct Remote ID
7.7 Aftersales Information
7.8 Applicable Law and Flying with the Goggles
7.9 Frequency Bands and Transmitter Power in the Czech Republic
7.10 Simplified EU Declaration of Conformity
7.11 Manufacturer
8. Information for the EU and Czech Market
8.1 Importer and responsible person in the EU
8.2 Product conformity
8.3 Disposal of electrical equipment and batteries
9. Warranty and rights arising from defective performance

Before You Start

Read Before Use

DJI provides you with tutorial videos and the following documents:

1. *Safety Guidelines*
2. *Quick Start Guide*
3. *User Manual* – this manual

It is recommended to watch all the tutorial videos and read the Safety Guidelines before using for the first time. Make sure to review the Quick Start Guide before using for the first time and refer to this User Manual for more information.

Safety Instructions

This product may be used only by persons aged 14 and over. It is not intended for children – it contains small parts; keep it out of their reach.

▶ User Health and Safety

- If you have a serious medical condition – such as a heart condition, a condition that limits your ability to safely perform physical activity, or a mental illness such as an anxiety disorder or post-traumatic stress disorder – or if you are pregnant or elderly, consult a doctor before using the goggles.
- Take regular breaks during use. Stop using the goggles if you experience motion sickness or any other discomfort.
- The image in the goggles does not exactly match your real surroundings. To avoid injury, use the goggles only in a safe, obstacle-free area, away from children and animals and at a safe distance from stairs, windows, balconies and heat sources.
- The goggles emit radio waves that may affect the operation of nearby electronic devices. **If you have a pacemaker or another implanted medical device, do not use the goggles without consulting your doctor** or the manufacturer of the device.
- Do not lend the goggles to persons with a contagious disease or infection, especially of the eyes or skin. Between uses, clean the goggles with skin-friendly, alcohol-free antibacterial wipes and clean the lenses with a dry microfiber cloth.
- The product is in close contact with the skin. Be careful if you are prone to allergic reactions. Stop using the goggles if swelling, itching, irritation or other discomfort occurs; if the symptoms persist, see a doctor.
- **Keep the lenses away from direct sunlight** – it may cause permanent damage (burn-in) to the screen.
- Flying with the goggles does not satisfy the requirement of visual line of sight (VLOS). Use the product in compliance with local regulations (chapter 7.8).

▶ **Built-in Battery and Charging**

- The goggles contain a built-in Li-ion battery. **DO NOT disassemble the battery compartment or replace the battery yourself** – a damaged or punctured battery may catch fire or explode.
- **DO NOT use the goggles in humid environments** and prevent liquid from entering the battery compartment. The battery could corrode and cause an explosion or fire.
- Charge the goggles with a 5 V / 3 A USB charger at temperatures from 5 °C to 45 °C. Charge under supervision, on a non-flammable surface and away from flammable materials.
- DO NOT leave the goggles in direct sunlight or in a hot car, and do not expose them to fire. The operating temperature is −10 °C to 40 °C.
- If the battery compartment swells, is damaged, overheats, or emits an odor or smoke, immediately stop using and charging the goggles and contact the seller.
- DO NOT store the goggles with a fully depleted battery for a long time – deep discharge may permanently damage the battery. Charge the goggles before and after long-term storage.

Video Tutorials and DJI Fly App

Scan the left QR code or go to www.dji.com/goggles-n3/video to watch the tutorial videos, which demonstrate how to use the product safely. Scan the right QR code to download the DJI Fly app.


Left: tutorial videos · right: DJI Fly app

- To check the Android and iOS operating system versions supported by DJI Fly, visit www.dji.com/downloads/djiapp/dji-fly.
- The interface and functions of DJI Fly may vary as the software version is updated. Actual user experience is based on the software version used.

DJI Assistant 2

Download DJI Assistant 2 (Consumer Drones Series) at: www.dji.com/downloads/softwares/dji-assistant-2-consumer-drones-series.

1. Overview

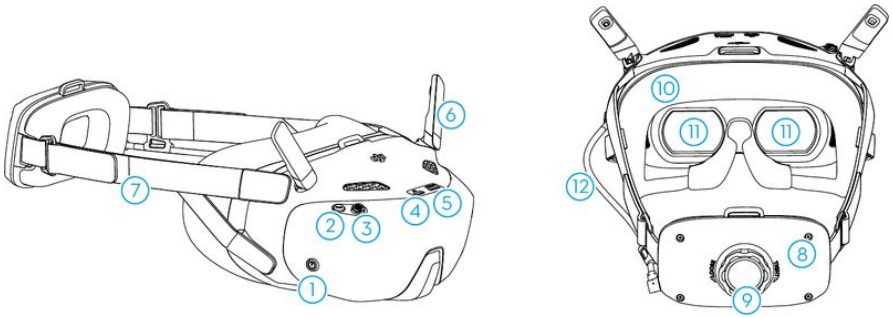


DJI Goggles N3 – parts

1	Power Button	7	Headband
2	Back Button	8	Battery Compartment
3	5D Button	9	Headband Adjustment Knob
4	USB-C Port	10	Foam Padding
5	microSD Card Slot	11	Lens
6	Antennas	12	Power Cable

※ When the goggles are connected to a smartphone or a PC, if the devices do not respond after connecting, go to the goggles menu and select *Settings* → *About*, and enter the *OTG Wired Connection* mode. If the devices still do not respond after connecting, use a different data cable and try again.

2. Preparing the Goggles

2.1 Powering on the Goggles

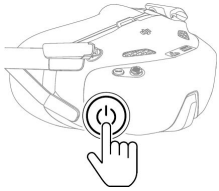


Power Button

- Press the power button once to check the current battery level.
- Press once, then press and hold for two seconds to power the goggles on or off.

Blinking Pattern	Battery Level
Solid Green	40–100%
Solid Yellow	11–39%
Solid Red	1–10%

If the battery level is low, it is recommended to use a USB charger (5 V / 3 A) to charge the device.

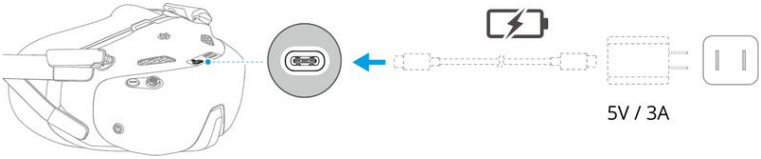

Charging via the USB-C port (5 V / 3 A charger)


The table below shows the battery level during charging:

Blinking Pattern	Battery Level
Pulses Yellow	1–39%
Pulses Green	40–99%
Solid Green	100%

2.2 Wearing the Goggles


- **Fold the antennas** to avoid damage when the goggles are not in use.
- DO NOT tear or scratch the foam padding, and the soft side of the battery compartment, or other components with sharp objects.
- The power cable is non-detachable. **DO NOT pull the power cable with force** to avoid damage.

① Unfold the antennas.

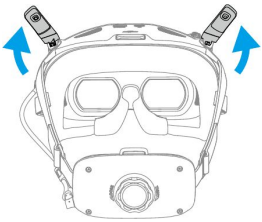


Unfolding the antennas

② Put on the goggles after the devices are powered on.

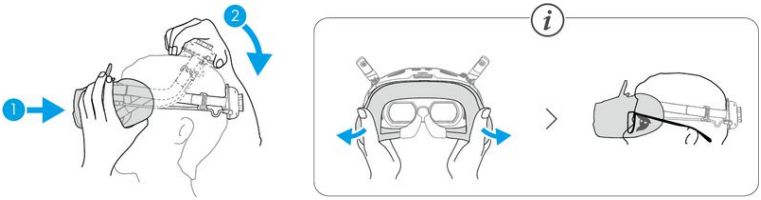

Putting on the goggles; inset (i): wearing over glasses

③ Rotate the headband adjustment knob on the battery compartment to adjust the length of the headband.

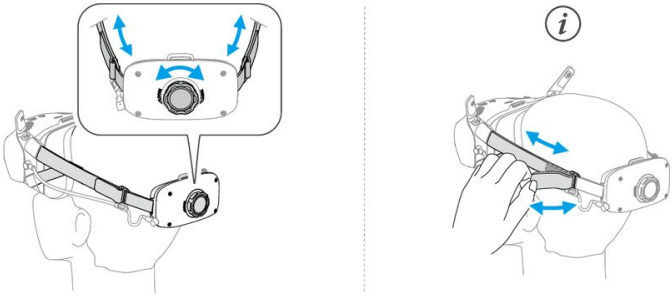


Adjusting the headband with the knob; inset (i): adjusting by hand

3. Activation

The goggles must be activated and updated before using for the first time.

Connect the USB-C port of the goggles to the smartphone. Run DJI Fly app and follow the on-screen instructions to activate the device and update the firmware. Make sure the smartphone is connected to the internet during activation.

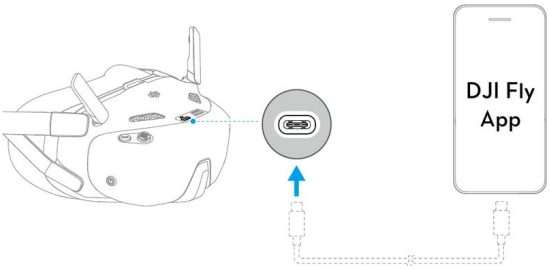

Activation via the DJI Fly app

4. Linking

Preparation before linking:

① Power on the aircraft, the goggles, and the remote control device before linking. Make sure the devices are within 0.5 m of each other during linking. Make sure the devices are updated to the latest firmware version and have enough battery level.

② Open the goggles menu, select *Status* and make sure that the aircraft model displayed at the top of the menu is correct. Otherwise, select *Switch* from the upper right corner of the menu and then select the correct aircraft.

4.1 Linking via DJI Fly App (recommended)


Keep the goggles connected to the smartphone after activation. Tap *Connection Guide* on DJI Fly from the smartphone and follow the on-screen instructions for linking.



Connection Guide in the DJI Fly app

4.2 Linking via Button

▶ Linking the Aircraft and the Goggles

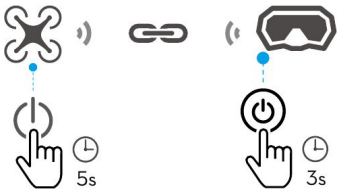


Aircraft: hold 5 s · goggles: hold 3 s

a) Press and hold the power button on the aircraft until it beeps once and the battery level LEDs start to blink in sequence.

b) Press and hold the power button on the goggles until the goggles start to beep continuously and the power button starts to blink yellow.

c) Once linking is completed, the battery level LEDs of the aircraft turn solid and display the battery level, the goggles stop beeping, and image transmission can be displayed normally.

▶ Linking the Goggles and Remote Control Device

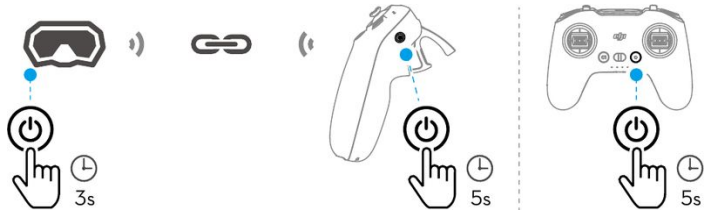

Goggles: hold 3 s · remote controller: hold 5 s

a) Press and hold the power button on the goggles until the goggles start to beep continuously and the power button starts to blink yellow.

b) Press and hold the power button on the remote control device until it starts to beep continuously and the battery level LEDs start to blink in sequence.

c) Once linking is completed, the goggles and remote control device stop beeping and display the battery level.


The aircraft can be controlled with only one remote control device during flight. If the aircraft has been linked with multiple remote control devices, turn off the other remote control devices before linking.

5. Using the Goggles

Using the goggles does not satisfy the requirement of visual line of sight (VLOS). Some countries or regions require a visual observer to assist during flight. Make sure to comply with local regulations when using the goggles (see chapter 7.8). Fly the aircraft in environments with good lighting and visibility.

※ The actual screen interface may differ from the descriptions in this manual, and vary depending on the aircraft used and the firmware version of the goggles.


5.1 FPV View

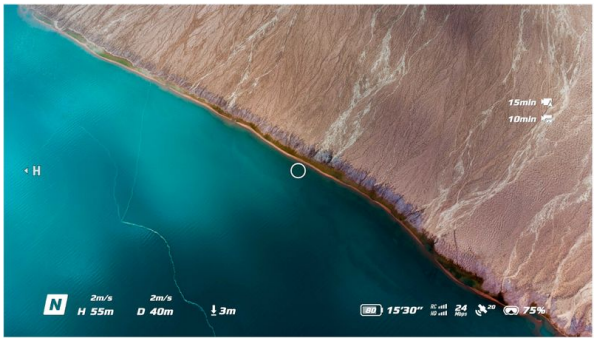

FPV view in the goggles

※ When controlling the aircraft with the motion controller, the circle indicates the direction in which the aircraft is heading.

5.2 Goggles Buttons

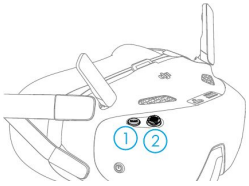


① Back · ② 5D

① **Back Button** – Press to return to the previous menu or exit the current view.

② **5D Button** – Press or push to open different menus from the FPV view of the goggles. After the menu is opened, push to navigate through the menu or adjust the parameter value. Press to confirm the selection. During video playback, press the button to control it.

▶ Shortcut Menu


Push the 5D button backward from the FPV view to open the shortcut menu.

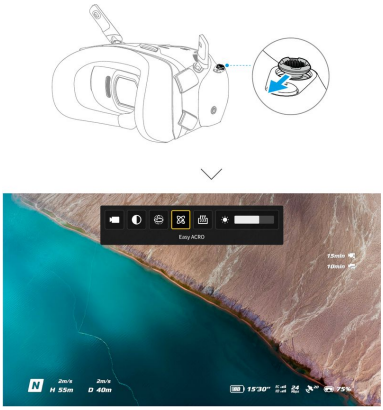

Shortcut menu (5D button backward)

▶ Camera Settings


Push the 5D button forward from the FPV view to open the camera settings panel. In the parameter panel, push to the right to view and set more parameters.

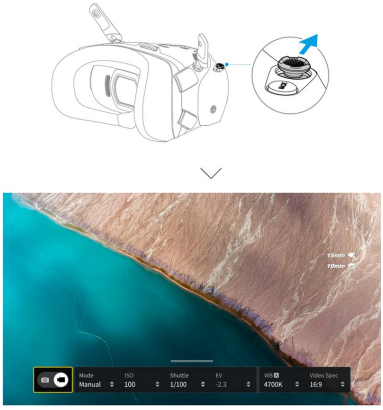

Camera settings panel (5D button forward)

▶ Goggles Menu

Press down the 5D button or push it to the right from the FPV view to open the menu.

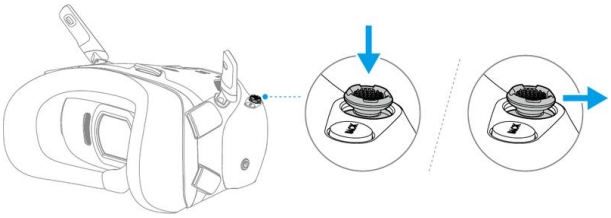

Goggles menu (press 5D button or push right)

- *Settings* → *Safety* → *Camera View Before Loss* helps to find the location of the aircraft by using the captured video of the aircraft within a period before the signal is lost. If the aircraft still has signal and battery power, turn on *ESC beeping* to locate the aircraft using a beeping sound that is emitted from the aircraft.
- Enter *Settings* → *Control* to view the goggles tutorial.

▶ Controlling Video Playback

When playing videos stored on the microSD card of the goggles, the 5D button can be used to control playback such as:

- Press the button to pause or continue to play.
- Push the button left or right to adjust the progress bar.
- Push the button backward to enter playback settings and adjust the screen brightness or volume.

5.3 AR Cursor

- AR Cursor is only supported when used with **DJI RC Motion 3** (hereinafter referred to as motion controller).
- AR Cursor cannot function properly when being used on moving objects, such as cars and ships.


Before takeoff or when using the lock button to trigger the aircraft to hover, users can use the AR Cursor (the white line with a circle at the end) to interact with the screen of the goggles.



AR Cursor

▶ Recenter the Cursor

If the cursor is not displayed on the screen of the goggles, hold the motion controller as shown below, and then press and hold the dial on the left side of the motion controller to recenter the cursor.

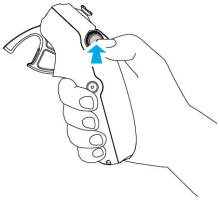


Recentering the cursor

If the cursor still cannot be found, tilt the motion controller up or down until the cursor appears on the screen.

▶ Operating the Menu

Using motion controller movements, move the cursor to the arrow on the left side of the screen. Gently press the accelerator to the first stop position, then the cursor will become small and the menu will be opened.

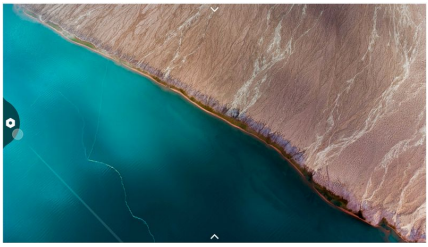

Arrow on the left side of the screen – menu


Use the joystick on the motion controller to scroll up or down in the menu.



Up / down


To exit or return to the previous menu, push the accelerator forward, or gently press the accelerator when the cursor is on any empty spot on the screen.

Move the cursor to the arrow on the top of the screen, press the accelerator to enter the shortcut menu, and configure settings such as recording.

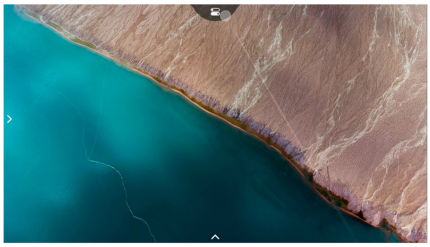


Arrow at the top of the screen – shortcut menu

Move the cursor to the arrow on the bottom of the screen, press the accelerator to enter camera settings, and configure settings for the parameters of the aircraft camera.

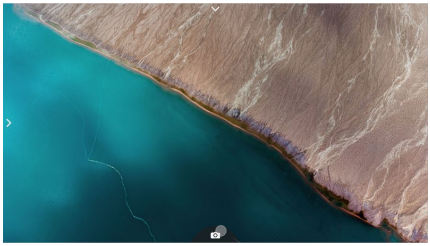

Arrow at the bottom of the screen – camera settings

Use the joystick on the motion controller to scroll left or right in the menu.

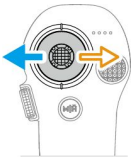


Left / right

▶ Controlling Video Playback

When playing videos stored on the microSD card of the goggles, the cursor can be used to control playback such as:

- Press the accelerator to pause or continue to play, push the accelerator forward to exit.
- Move the cursor left or right while pressing the accelerator down to adjust the progress bar.
- Move the cursor to the arrow on the top of the screen, press down the accelerator to enter playback settings and adjust the screen brightness or volume.

5.4 Goggles Footage Storage and Export

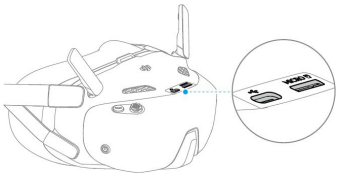

microSD Card Slot

▶ Footage Storage

The goggles support the installation of a microSD card. After a microSD card is inserted, if *Record With* is set to both the aircraft and the goggles, while the aircraft is recording video, the goggles will simultaneously record the liveview displayed on the screen and store it on the microSD card of the goggles.

▶ Footage Export

- Power on the goggles. Connect the USB-C port of the goggles to a PC, and follow the on-screen prompts to export the footage.
- Alternatively, remove the microSD card from the goggles and insert it into a card reader, and export the footage in the microSD card through the card reader.

The screen recording includes the OSD elements by default. To record the screen without the OSD elements, open the goggles menu, select *Settings* → *Camera* → *Advanced Camera Settings*, and disable *Camera View Recording*.

▶ Formatting the SD Card

① Open the goggles menu.

② Select *Settings* → *Camera* → *Format*.

③ Select the storage device to format and follow the on-screen instructions to complete the operation.

Data cannot be recovered after formatting. Operate with caution.

5.5 Liveview Sharing

DJI Goggles N3 can share a flight liveview via the following methods.

- Power on the aircraft, goggles, and remote control device. Make sure all the devices are linked.
- Operate Liveview Sharing prior to taking off, or when the aircraft is braking or hovering, to avoid interfering with the pilot's operation.
- The goggles only support connecting to one smartphone for sharing the liveview at a time. Other smartphones cannot be connected during this period.
- When connected to a smartphone, liveview sharing will be paused when viewing the images or videos in the album. Exit the album to recover sharing.

- When using the broadcasting mode, the audience and the pilot goggles must select the same aircraft model.

▶ Wired Connection with Smartphone

① Connect the USB-C port of the goggles to the smartphone.

② Launch DJI Fly app and tap *GO FLY* in the lower right corner of the screen to enter the liveview.

▶ Broadcasting to Other Goggles

① Enter the DJI Goggles N3 menu, select *Transmission* and enter the *Pilot* sub-menu.

② Turn on *Broadcasting* mode, and the device number will be displayed.

③ On the other goggles, enter the goggles menu, select *Transmission* and enter the *Audience* sub-menu.

④ If any nearby goggles turns on the Broadcasting mode, the device and its signal strength can be viewed in the *Audience* sub-menu. Select the device number to access the liveview. Switching to *Pilot* sub-menu to exit the shared liveview.

5.6 Panorama Video Playback

① Import videos to a microSD card, and insert it into the goggles.

② Enter the goggles menu and then *Album*, then select the video file to play.

③ Push the 5D button backward to open the playback menu, and select 2D for display switch settings.

④ Exit the shortcut menu after confirming the selections, then the video will be played based on the display settings.

- Refer to DJI official website for more information about the supported video formats: www.dji.com/goggles-n3/specs.
- The goggles have no speaker but can be connected to headphones via the USB-C port. Only supports Type-C headphones with built-in DAC (digital-to-analog converter).

5.7 Head Tracking


Head tracking is only supported by certain aircraft and can be enabled by selecting in the shortcut menu of the goggles.

After enabling head tracking, the horizontal orientation of the aircraft and the gimbal tilt can be controlled using head movements during flight. The remote control device will only control the flight path of the aircraft, the gimbal cannot be controlled.

6. Maintenance


6.1 Replacing the Foam Padding

① Hold the position as shown below and remove the foam padding gently.

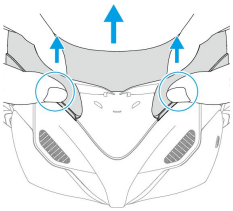

Removing the foam padding

② Align the positioning columns of the new foam padding with the positioning holes on the goggles. Install it and press along the contour. After hearing a clicking sound, check and make sure that there is no gap between the foam padding and the goggles.

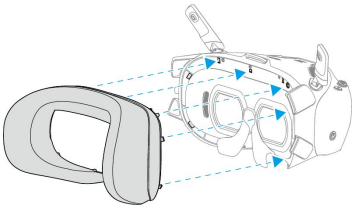

Installing the new foam padding

6.2 Cleaning and Maintenance

Clean the surface of the goggles with a soft, dry, clean cloth. Use the lens cleaning cloth to clean the lenses in a circular motion from the center to the outer edges.

- **DO NOT clean the integrated goggle lenses with alcohol wipes.**
- Clean the lenses gently. DO NOT scratch them as this will affect viewing quality.
- DO NOT use alcohol or other cleanser to wipe the foam padding and the soft side of the battery compartment.
- DO NOT tear or scratch the foam padding, and the soft side of the battery compartment, or other components with sharp objects.
- Store the goggles in a dry place at room temperature to avoid damage to the lenses and other optical components from high temperatures and humid environments.
- **Keep the lenses away from direct sunlight** to avoid screen damage.

6.3 Built-in Battery

The goggles contain a built-in **Li-ion ($LiNiMnCoO_2$), 2450 mAh, 6.33–8.4 V, 17.64 Wh** battery, housed in the battery compartment at the rear of the headband (chapter 1, item 8).

- DO NOT disassemble the battery compartment, and do not remove or replace the battery yourself. Have the battery removed or replaced only by the manufacturer's service center or a qualified professional.
- At the end of its service life, dispose of the goggles as a whole, including the battery (chapter 8.3).

7. Appendix

7.1 Specifications

Model	DJI Goggles N3, model **TKGSM**
Weight	536 g (with battery and headband) 349 g (without battery and headband)
Dimensions (L × W × H)	Antennas folded: 193 × 163 × 103 mm Antennas unfolded: 206 × 163 × 132 mm
Display	1 × 3.5″ screen, 1920 × 1080 resolution, refresh rate up to 60 Hz
Field of View (FOV)	54°
Interpupillary Distance	No adjustment required
Diopter Adjustment	None; can be worn over prescription glasses
Video Recording Format	MOV (H.264)
Playback	MP4, MOV (video H.264, H.265; audio AAC, PCM); spherical 2D panoramic video up to 4K/60fps
Memory Card	microSD up to 512 GB
Operating Temperature	−10 °C to 40 °C
Video Transmission	DJI O4
Operating Frequency	2.400–2.4835 GHz 5.150–5.250 GHz 5.725–5.850 GHz
Transmitter Power (e.i.r.p., CE)	O4: 2.4 GHz < 20 dBm · 5.1 GHz < 23 dBm · 5.8 GHz < 14 dBm GFSK: 2.4 GHz < 20 dBm
Latency	With DJI Avata 2: min. 31 ms (1080p/100fps) With DJI Neo: min. 58 ms (1080p/60fps)
Max. Transmission Range (CE)	With DJI Avata 2: 10 km · with DJI Neo: 6 km (unobstructed, interference-free; limited by the aircraft's max. flight range)
Max. Video Bitrate	With DJI Avata 2: 60 Mb/s · with DJI Neo: 50 Mb/s
Battery	Built-in Li-ion ($LiNiMnCoO_2$), 2450 mAh, 6.33–8.4 V, 17.64 Wh
Battery Dimensions (L × W × H)	120 × 71 × 44 mm
Charging	USB-C, max. 5 V / 3 A (charging while powered off)
Charging Temperature	5 °C to 45 °C
Operating Time	Up to 2.7 h *

Visit www.dji.com/goggles-n3/specs for full specifications.

** Measured at an ambient temperature of 25 °C, screen brightness 6, with DJI Avata 2, 1080p/100fps video transmission, head tracking disabled and fully charged goggles not powering any external device (e.g. a smartphone).*

▶ Recommended microSD Cards

- Lexar Professional 1066x 64 / 128 / 256 / 512 GB U3 A2 V30 microSDXC
- Kingston CANVAS Go! Plus 64 / 128 / 256 / 512 GB U3 A2 V30 microSDXC

▶ In the Box

DJI Goggles N3 × 1. A USB-C data cable, USB charger, microSD card and aircraft are not included.

7.2 Updating Firmware

Use one of the following methods to update the firmware.

▶ Using DJI Fly App

When used with DJI Neo or DJI Avata 2, the aircraft, goggles, and remote control device can be updated together.

Power on the aircraft, goggles, and remote control device. Make sure all the devices are linked. Connect the USB-C port of the goggles to the smartphone. Run DJI Fly, and follow the prompt to update. An internet connection is required.

▶ Using DJI Assistant 2 (Consumer Drones Series)

① Power on the device. Connect the device to a computer with a USB-C cable.

② Launch DJI Assistant 2 and log in with your DJI account.

③ Select the device and click *Firmware Update* on the left side of the screen.

④ Select the firmware version.

⑤ Wait for the firmware to download. The firmware update will start automatically. Wait for the firmware update to complete.

- Make sure to follow all the steps to update the firmware, otherwise the update may fail.
- The firmware update will take several minutes. It is normal for the screen to turn off or the goggles to restart automatically during the update. Wait patiently for the firmware update to complete.
- Make sure the computer is connected to the internet during the update.
- Make sure the device has sufficient power before updating the firmware.
- **DO NOT unplug the USB-C cable during the update.**
- Note that the update may reset the parameters. Before updating, take note of your preferred settings and reconfigure them after the update.

Visit the following link and refer to the Release Notes for firmware update information: www.dji.com/goggles-n3/downloads.

7.3 Compatibility

DJI Goggles N3 is compatible with the following aircraft and video transmission units (according to the official DJI website):

- **Aircraft:** DJI Avata 2, DJI Avata 360, DJI Neo, DJI Neo 2
- **Video transmission units:** DJI O4 Air Unit, DJI O4 Air Unit Pro, DJI O4 Wide Air Unit

With DJI Avata 2 and DJI Neo, the goggles are used with DJI RC Motion 3 or DJI FPV Remote Controller 3; with the DJI O4 Air Unit series, they are used with DJI FPV Remote Controller 3.

Support for some devices was added only in later firmware versions of the goggles, so update the goggles before use (chapter 7.2). Visit www.dji.com/goggles-n3/faq for an up-to-date list of compatible products.

7.4 Risk and Warnings

When the aircraft detects any risk after powering on, there will be a warning prompt on the goggles screen. Pay attention to the prompt during flight and take necessary actions accordingly to avoid product damage or risk of injury.

If the *Signal Lost Action* of the aircraft is set to RTH, when the control signal or transmission is lost during flight, the aircraft will automatically initiate Failsafe RTH and fly back to the last recorded Home Point.

In emergency situations during flight, such as if a collision occurs, a motor stalls, the aircraft rolls in the air, or the aircraft is out of control and is ascending or descending quickly, the motors can be stopped by **pressing the motion controller lock button four times**.

Stopping motors mid-flight will cause the aircraft to crash. Operate with caution.

If the goggles screen goes off unexpectedly during flight, press the motion controller lock button once to brake the aircraft first, and then initiate RTH manually. After the aircraft is back, check the goggles power level and try to restart the goggles. If the problem persists, contact DJI support.

7.5 Troubleshooting

Problem	Solution
Power-on and start-up problems	Check if the battery has power. Contact DJI support if it cannot be started normally.
Power-off and shutdown problems	Contact DJI support.
The device is not functioning after powering on	Contact DJI support.
SW update issues	Follow the instructions in chapter 7.2 to update the firmware. If the firmware update fails, restart all the devices and try again. If the problem persists, contact DJI support.
Reset to factory default	Open the goggles menu and select *Settings* → *About* → *Reset All*.
Use after long-term storage	Fully charge the device first and then it can be used normally.

7.6 Direct Remote ID

Method of uploading the UAS Operator Registration Number to the aircraft:

① Connect the goggles to the mobile device.

② Launch DJI Fly on the mobile device.

③ Enter DJI Fly, select *Safety* → *UAS Remote Identification*, and then upload UAS Operator Registration Number.

7.7 Aftersales Information

Visit www.dji.com/support to learn more about aftersales service policies, repair services, and support. Claims for defects must be made with the seller – see chapter 9.

Download the latest version of the original manufacturer's manual from www.dji.com/goggles-n3/downloads. If you have any questions about this document, please contact DJI by sending a message to DocSupport@dji.com.

7.8 Applicable Law and Flying with the Goggles

Regulations (EU) 2019/947 and 2019/945 apply in all member states of the European Union, but national implementing rules differ from country to country – registration portals, minimum remote pilot age, geographical zones, mandatory insurance, permitted frequency bands and maximum transmitter power. The data in this chapter describe the situation in the Czech Republic. **If you operate the aircraft in another country, you must follow the regulations of the country in which you are flying.**

- When flying with FPV goggles, the remote pilot is unable to maintain visual line of sight with the aircraft on their own. In the open category, an **unmanned aircraft observer** must therefore stand next to the remote pilot, watch the aircraft directly with the naked eye, without optical aids, and warn the remote pilot of any hazards.

7.9 Frequency Bands and Transmitter Power in the Czech Republic

The goggles transmit in three bands. In the Czech Republic, the following conditions of the general authorisations of the Czech Telecommunication Office (ČTÚ) apply to them:

Band	Max. product power (CE)	Limit in CZ	Conditions
2400–2483.5 MHz	< 20 dBm e.i.r.p.	100 mW e.i.r.p.	VO-R/12/11.2021-11, band a)
5150–5250 MHz	< 23 dBm e.i.r.p.	200 mW e.i.r.p.	VO-R/12/11.2021-11, band b1); UAS must not be operated in the 5150–5170 MHz sub-band
5725–5850 MHz	< 14 dBm e.i.r.p.	25 mW e.i.r.p.	VO-R/10/05.2025-5, Art. 3, row k)

- **The user is responsible for the configuration and operation of the radio equipment.** The goggles select the band automatically according to the environment; use them only in the bands and at the power levels permitted in the country where you fly.
- DO NOT connect other antennas or amplifiers to the goggles and do not modify the goggles electrically or mechanically – the limits apply to the complete transmitter and antenna assembly.
- Outside the Czech Republic, the frequencies and limits of the respective country apply.

7.10 Simplified EU Declaration of Conformity

Hereby, SZ DJI TECHNOLOGY CO., LTD. declares that the radio equipment type DJI Goggles N3 (TKGSM) is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: www.dji.com/euro-compliance

The electronic label (e-label) with compliance information can be displayed in the goggles menu: *Settings* → *About* → *Compliance Info*.

7.11 Manufacturer

Manufacturer	SZ DJI TECHNOLOGY CO., LTD.
Address	Lobby of T2, DJI Sky City, No. 53 Xianyuan Road, Xili Community, Xili Street, Nanshan District, Shenzhen, China
E-mail	support@dji.com
EU contact address	DJI GmbH, Industriestrasse 12, 97618 Niederlauer, Germany
Web	www.dji.com

The importer and responsible person in the EU is Beryko s.r.o. – see chapter 8.1.

8. Information for the EU and Czech Market

8.1 Importer and responsible person in the EU

The product is placed on the European Union market by the importer stated below, who is at the same time the responsible person within the meaning of Article 16 of Regulation (EU) 2023/988 of the European Parliament and of the Council on general product safety (GPSR).

Importer / responsible person in the EU	Beryko s.r.o.
Company ID (IČO)	028 52 152
VAT ID (DIČ)	CZ02852152
Registered office	Pod Vinicemi 931/2, 301 00 Plzeň, Czech Republic
Website	www.beryko.cz

8.2 Product conformity

CE

- The product bears the **CE** marking and complies with the requirements of the applicable European Union harmonisation legislation.
- A copy of the **EU Declaration of Conformity** is available from the importer at the address stated above.
- **Product identification:** the type designation (DJI Goggles N3, model TKGSM) and the serial number are given on the product or on its packaging.

8.3 Disposal of electrical equipment and batteries



- The crossed-out wheeled bin symbol on the product, its packaging or in the documentation means that at the end of its service life the product **must not be disposed of together with mixed municipal waste**.
- Hand it over at a take-back point for electrical equipment – at a collection yard, at a take-back point of a collective system, or at the retailer when purchasing a new equivalent product. Take-back is free of charge for the end user.
- The product contains a built-in rechargeable battery. Where possible, hand it over together with the device – do not dispose of the battery in mixed waste or in fire.
- The obligations under Act No. 542/2020 Coll., on end-of-life products, are fulfilled by the importer through a collective take-back system.
- Proper disposal helps prevent negative impacts on the environment and human health and contributes to the reuse of secondary raw materials.

Through its contractual partner **ASEKOL a.s.**, the seller, Rotorama, s.r.o., ensures the take-back of waste electrical equipment from households and the separate collection of waste electrical equipment, batteries and accumulators in accordance with the applicable legislation. The customer is entitled to hand over old electrical equipment or a battery or accumulator at any collection point of the above contractual partner. The addresses of these take-back points are listed at www.asekol.cz, www.ecobat.cz and also https://visoh2.mzp.cz/RegistrMistZO/RegistrMistZOPublic/MapaMistZpetOdberu.

9. Warranty and rights arising from defective performance

The rights and obligations of the contracting parties are governed by Czech law, in particular by Act No. 89/2012 Coll., the Civil Code, and Act No. 634/1992 Coll., on consumer protection.

- The seller is liable to the buyer for the product being free of defects on receipt. If the buyer is a consumer, a defect may be notified **within two years of receipt** of the product (Section 2165 of the Civil Code).
- If a defect appears within **one year** of receipt, the product is deemed to have been defective already at the time of receipt (Section 2161(5) of the Civil Code).
- When purchasing online, a consumer has the right to **withdraw from the contract within 14 days** of receiving the goods without giving a reason (Section 1829 of the Civil Code).
- Claims should be made with the retailer from whom you purchased the product.
- The competent body for out-of-court settlement of consumer disputes is the **Czech Trade Inspection Authority**, Štěpánská 796/44, 110 00 Prague 1, www.coi.cz.