
TBS Anti-slip Pad

Battery anti-slip pad (3 pcs)
User manual

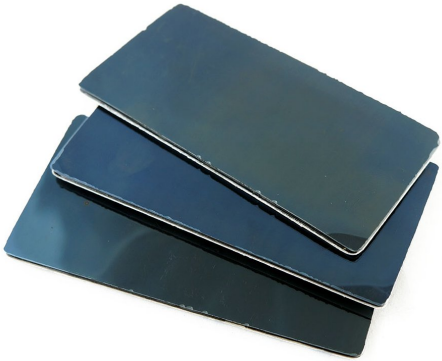

The pad increases the grip between the battery and the frame, but it does not replace the battery strap. Always secure the battery with a strap.

www.rotorama.com

Contents

1. Product description

1.1 What it is for

1.2 Specifications and package contents

2. Use

2.1 Attaching the pad to the frame

2.2 Securing the battery

2.3 Care and replacement

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

3.2 Disposal

4. Warranty and rights arising from defective performance

1. Product description

1.1 What it is for

The TBS anti-slip pad is stuck onto the frame plate of a drone where the battery sits. Its very grippy surface stops the battery from sliding or rotating under the battery strap – in flight, during hard manoeuvres and in a crash.

With a thickness of 2.5 mm, the pad covers the screw heads on the frame plate, so the battery rests on a flat surface. The 100 × 50 mm size is large enough even for freestyle and long-range frames, and the pad can easily be cut to the size you need. The underside is fitted with double-sided adhesive tape for easy attachment to the frame.



TBS anti-slip pads

1.2 Specifications and package contents

Manufacturer	Team BlackSheep (TBS)
Product designation	TBS Battery Anti-slip Pad (3pcs)
Dimensions (L × W × H)	100 × 50 × 2.5 mm
Attachment	double-sided adhesive tape on the underside, protected by a release liner
Package contents	3 × anti-slip pad of identical size
Not included	battery strap, battery, scissors

2. Use

2.1 Attaching the pad to the frame

① Disconnect and remove the battery. Always work on the drone with the power disconnected.

② Measure the area on which the battery sits and trim the pad with sharp scissors or a knife. Leave the holes and slots for the strap uncovered.

③ Clean the spot on the frame of dust and grease (e.g. with isopropyl alcohol) and let it dry thoroughly.

④ Peel the release liner off the underside of the pad. Do not touch the adhesive surface with your fingers.

⑤ Place the pad and press it firmly onto the frame over its entire surface. Leave it unloaded for a while before the first flight so the adhesive can bond better.



Underside of the pad with the release liner of the adhesive tape

2.2 Securing the battery

- Place the battery on the pad and **always secure it with a battery strap**. The pad only increases friction; it cannot hold the battery on its own.
- The pad raises the battery by its thickness (2.5 mm). Check that the strap is long enough and properly tightened and that neither the battery nor its leads can reach the propellers.
- Before every flight, check that the pad is not peeling off and that the battery cannot be moved under the strap.

2.3 Care and replacement

- Dust, sand and grass reduce grip – wipe a dirty pad with a damp cloth and let it dry.
- Remove a worn or loose pad, clean off adhesive residue (e.g. with isopropyl alcohol) and attach a new one – the pack contains three pads.
- Keep offcuts and the liner away from small children and animals.

3. Information for the EU and Czech Market

3.1 Importer and responsible person in the EU

The product is placed on the European Union market by the importer stated below, who is at the same time the responsible person within the meaning of Article 16 of Regulation (EU) 2023/988 of the European Parliament and of the Council on general product safety (GPSR).

Importer / responsible person in the EU	Rotorama, s.r.o.
Company ID (IČO)	051 57 692
VAT ID (DIČ)	CZ05157692
Registered office	Okrajová 1351, 674 01 Třebíč, Czech Republic
E-mail	info@rotorama.cz
Phone	+420 252 252 098
Website	www.rotorama.com

3.2 Disposal

The pad is not electrical equipment and contains no batteries, so the take-back scheme for electrical equipment does not apply to it.

- Dispose of a worn pad and the removed release liner with mixed municipal waste, unless local regulations specify otherwise.
- Sort the product packaging by material type into the appropriate recycling container.
- The waste management regulations of the country in which you use and dispose of the product are decisive.

4. Warranty and rights arising from defective performance

The rights and obligations of the contracting parties are governed by Czech law, in particular by Act No. 89/2012 Coll., the Civil Code, and Act No. 634/1992 Coll., on consumer protection.

- The seller is liable to the buyer for the product being free of defects on receipt. If the buyer is a consumer, a defect may be notified **within two years of receipt** of the product (Section 2165 of the Civil Code).
- If a defect appears within **one year** of receipt, the product is deemed to have been defective already at the time of receipt (Section 2161(5) of the Civil Code).
- When purchasing online, a consumer has the right to **withdraw from the contract within 14 days** of receiving the goods without giving a reason (Section 1829 of the Civil Code).
- Claims should be made with the retailer from whom you purchased the product. The importer's contact details are given in Chapter 3.1.
- The competent body for out-of-court settlement of consumer disputes is the **Czech Trade Inspection Authority**, Štěpánská 796/44, 110 00 Prague 1, www.coi.cz.